


WARNING: Failure to follow instructions could result in damage to product and void warranties!
WARNING: Risk of fire or electrical shock. Disconnect power before installing or servicing.
WARNING: Verify the existing input voltage and ensure it matches input rating on luminaire's product label, located on inside of access cover.
WARNING: Before proceeding, read all instructions carefully to ensure proper and safe installation.
IMPORTANT: This product must be installed in accordance with the applicable installation code by a licensed electrician, familiar with the construction and operation of the product and the hazards involved.

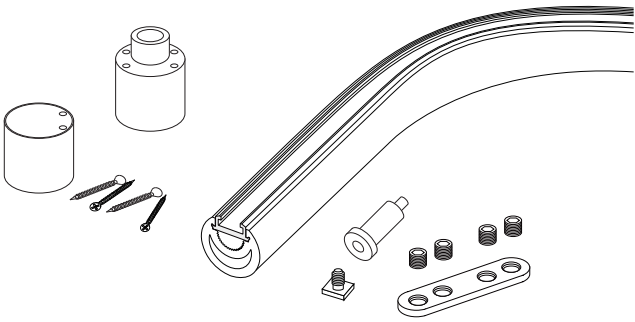

INSTALLATION AND ASSEMBLY INSTRUCTIONS

CURV 270 SERIES

www.techoled.com | Brooklyn NY

If you have questions or concerns, please reach out to
TechoLED at 212-876-5373 or info@techoled.com
we are here to help!

6. Driver box

Driver box for pendant installation

7. Canopy

Canopy for pendant

10. Wall mounted

Bracket for wall mounted

4. Silicone diffuser

AL-Profile

2. Stick strip

Silicone Diffuser

LED strip

LED strip

1. Continuous run assembly

1. Continuous run assembly

2. Stick strip

2. Stick strip

1. Peel the 3M tape off the solder side.

1. Peel the 3M tape off the solder side.

2. Stick 3M tape onto profiles.

2. Stick 3M tape onto profiles.

Place a cylinder under the strip

Place a cylinder under the strip

The raised hole between two leds

The raised hole between two leds

Press LED strip from both sides

Press LED strip from both sides

Done

Done

5. Install end cap

End cap for straight-through cable

End cap

End cap

9. Ceiling mounted or Wall mounted

Bracket for wall mounted / ceiling mounted

Tool

Tool

3. Electrical connection

Universal male and female connector

1. Mechanical connection

Straight connector

Hexagonal screw driver

Hexagonal screw driver

3. Electrical connection

No front/back orientation required

4. Install silicone diffuser

One side first

Then another side

5. Install end cap

Pay attention to the position, it needs to be horizontally aligned

6. Driver box

1. Install anchors into the ceiling.

2. Fix bracket onto ceiling by self-tapping screw.

3. Cable pass through Female wire locker → Driver box → Male wire locker.

4. Install led driver into bracket.

5. Fix pendant box by self-tapping screw.

7. Canopy

1. Anchor into ceiling.

2. Fix bracket onto ceiling by self-tapping screw.

3. Cable pass through Female wire locker → Canopy → Male wire locker.

4. Fix canopy on bracket by fixed screw.

8. Pendant

1. Install anchors into the ceiling.

2. Fix the davit onto ceiling.

3. Screw the pendant head into davit.

4. Put the square-head into the wire locker.

5. Install one side of the square-head into profile.

6. Install another side of the square-head into profile.

9. Ceiling mounted or Wall mounted

1. Insert the bracket horizontally into the profile.

2. Rotate the bracket to align vertically with the profile.

4.1 install anchors into ceiling

5.1 Fix bracket on ceiling

3. Fix bracket into the profile

4.2 Knock expansion tubes and self-tapping screw into ceiling

5.2 Self-tapping screw goes through the bracket big circle part first. Move it to the narrow part

10. Wall mounted

1. Fix screws to supports (Don't tighten it too much.).

2. Fix cable.

3. Install two supports to FLEX 270 then fix screws to supports tightly.

4. Fix supports on wall.

www.techoled.com | Brooklyn NY