
techoLED®
BROOKLYN • NY

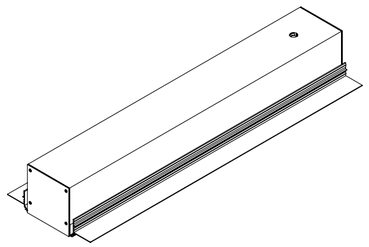

INSTALLATION AND
ASSEMBLY INSTRUCTIONS

CHANNEL SERIES

RECESSED MUD-IN

www.techoled.com | Brooklyn NY

SAFETY INFORMATION

CAUTION

All installation must be completed by a qualified electrician!

NOTICE

When installing or using this recessed fixture, basic safety precautions should be followed.

Before installation of any luminaire onto an electrical junction box, be sure to disconnect power.

QUESTIONS OR CONCERNS?


TechoLED
212-876-5373
info@techoled.com

RECESSED INSTALLATION

01 Turn off power at the fuse box before proceeding.

02 According to the factory drawing, create a slot on the surface and put the fixture in the slot.


03 Fix the fixture inside with screws, then putty the trim and make it flush with the ceiling.

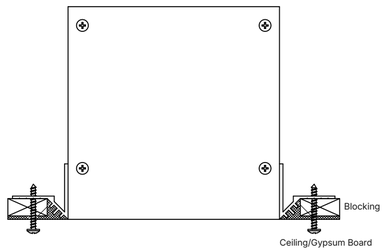


ELECTRICAL CONNECTION

04 Wiring diagram

WITHOUT DIMMING

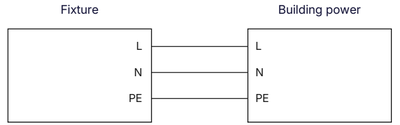

WITH DIMMING

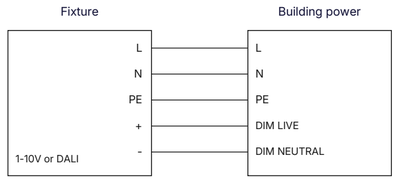


05 Find the right wiring below:

WITH DIMMING	WITHOUT DIMMING
BROWN - LIVE	BROWN - LIVE
BLUE - NEUTRAL	BLUE - NEUTRAL
GREEN - EARTH	GREEN - EARTH
WHITE - DIM LIVE	
BLACK - DIM NEUTRAL	

06 Turn on power.


CONTINUOUS RUN ASSEMBLY

01 If joining multiple fixtures together, loosen the set screws on the connector brackets.

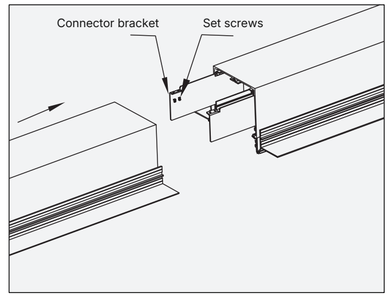


CONTINUOUS RUN ASSEMBLY


02 Connect wires between fixtures using the connectors provided and push excess wire into the fixtures.

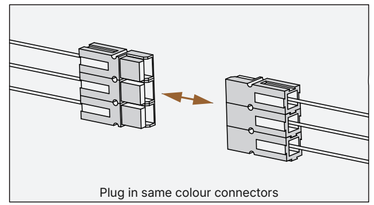

03 Join sections together and secure the joined fixtures with the JOINER BRACKET set screws.

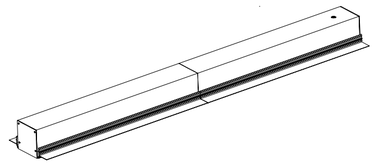

techoLED®
BROOKLYN • NY

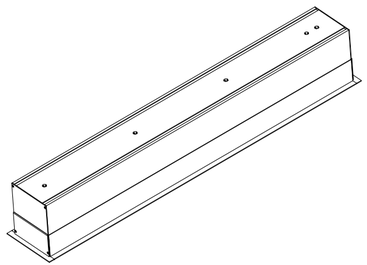

INSTALLATION AND
ASSEMBLY INSTRUCTIONS

CHANNEL SERIES

RECESSED

www.techoled.com | Brooklyn NY

SAFETY INFORMATION

CAUTION

All installation must be completed by a qualified electrician!

NOTICE

When installing or using this recessed fixture, basic safety precautions should be followed.

Before installation of any luminaire onto an electrical junction box, be sure to disconnect power.

QUESTIONS OR CONCERNS?


TechoLED
212-876-5373
info@techoled.com

RECESSED INSTALLATION


01 Turn off power at the fuse box before proceeding.

02 According to the factory drawing, create a slot on the surface.

03 Install the screw in the ceiling.

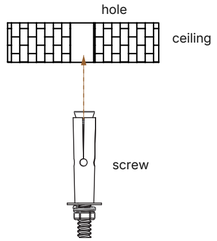


04 Fix the fixture to the screw with the nut.

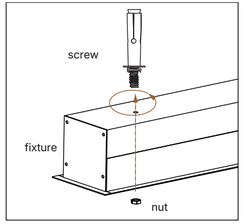


ELECTRICAL CONNECTION

05 Wiring diagram

WITHOUT DIMMING

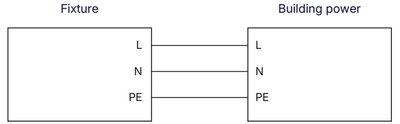

WITH DIMMING

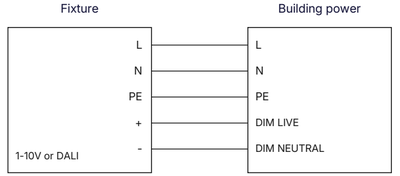


06 Find the right wiring below:

WITH DIMMING	WITHOUT DIMMING
BROWN - LIVE	BROWN - LIVE
BLUE - NEUTRAL	BLUE - NEUTRAL
GREEN - EARTH	GREEN - EARTH
WHITE - DIM LIVE	
BLACK - DIM NEUTRAL	


07 Install the heatsink board and lens, then turn on power.

CONTINUOUS RUN ASSEMBLY

01 If joining multiple fixtures together, loosen the set screws on the connector brackets.

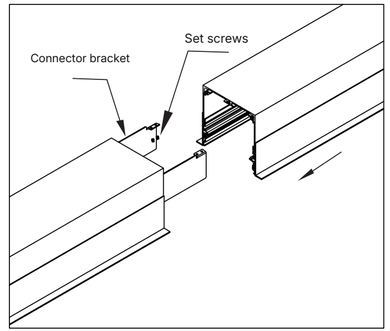



03 Join sections together and secure the joined fixtures with the JOINER BRACKET set screws.

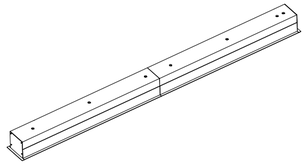

CONTINUOUS RUN ASSEMBLY


02 Connect wires between fixtures using the connectors provided and push excess wire into the fixtures.

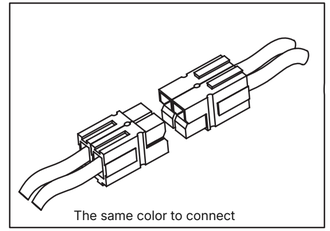

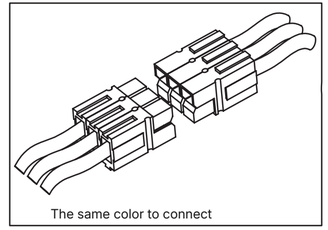

04 Install the lens.

techoLED®
BROOKLYN • NY

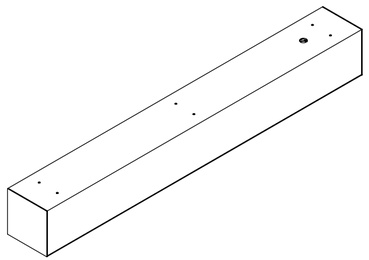

INSTALLATION AND
ASSEMBLY INSTRUCTIONS

CHANNEL SERIES

SURFACE MOUNT

www.techoled.com | Brooklyn NY

SAFETY INFORMATION

CAUTION

All installation must be completed by a qualified electrician!

NOTICE

When installing or using this surface mount fixture, basic safety precautions should be followed.

Before installation of any luminaire onto an electrical junction box, be sure to disconnect power.


QUESTIONS OR CONCERNS?

TechoLED
212-876-5373
info@techoled.com


SURFACE MOUNT INSTALLATION

01 Turn off power at the fuse box before proceeding.

02 Remove the covers by pulling them off the fixture.

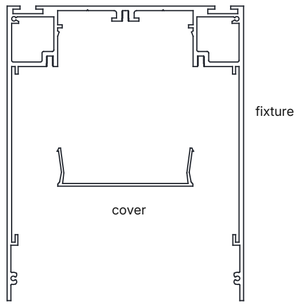


03 Install the fixture on the ceiling with the anchor screw and screw.

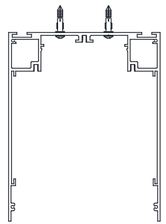


ELECTRICAL CONNECTION

04 Wiring diagram

WITHOUT DIMMING

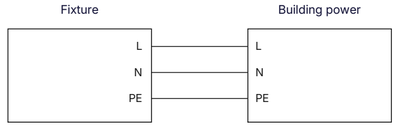

WITH DIMMING

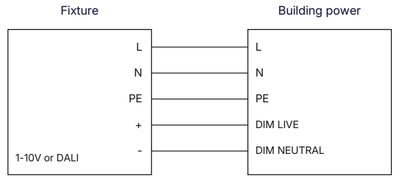

05 Find the right wiring below:


WITH DIMMING	WITHOUT DIMMING
BROWN - LIVE	BROWN - LIVE
BLUE - NEUTRAL	BLUE - NEUTRAL
GREEN - EARTH	GREEN - EARTH
WHITE - DIM LIVE	
BLACK - DIM NEUTRAL	

06 Install the covers back.

07 Turn on power.


CONTINUOUS RUN ASSEMBLY

01 If joining multiple fixtures together, loosen the set screws on the connector brackets.

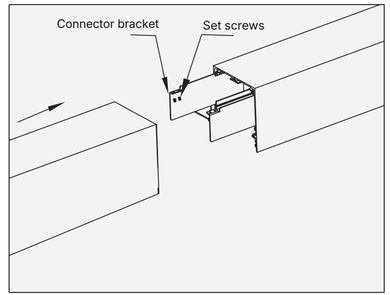


CONTINUOUS RUN ASSEMBLY


02 Connect wires between fixtures using the connectors provided and push excess wire into the fixtures.

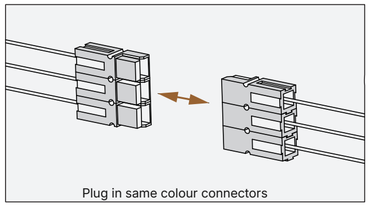

03 Join sections together and secure the joined fixtures with the JOINER BRACKET set screws.

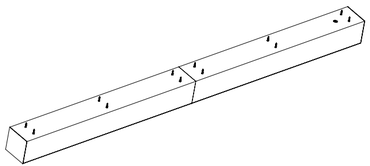

techoLED®
BROOKLYN • NY

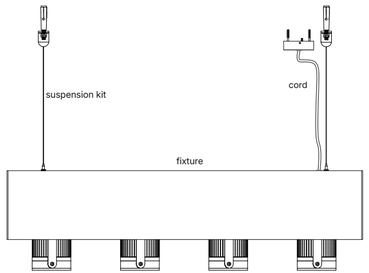

INSTALLATION AND
ASSEMBLY INSTRUCTIONS

CHANNEL SERIES

SUSPENDED

www.techoled.com | Brooklyn NY

SAFETY INFORMATION

CAUTION

All installation must be completed by a qualified electrician!

NOTICE

When installing or using this suspended fixture, basic safety precautions should be followed.

Before installation of any luminaire onto an electrical junction box, be sure to disconnect power.


QUESTIONS OR CONCERNS?

TechoLED
212-876-5373
info@techoled.com


SUSPENDED INSTALLATION

01 Turn off power at the fuse box before proceeding.

02 Install the bolt screw and ceiling fitting.

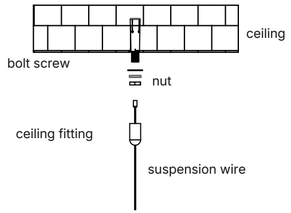


03 Connect the suspension wire to the fixture.

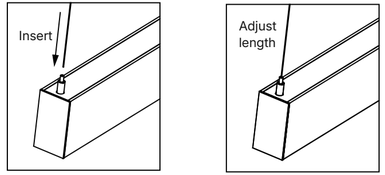

CANOPY AND WIRING

04 Install the canopy bracket.

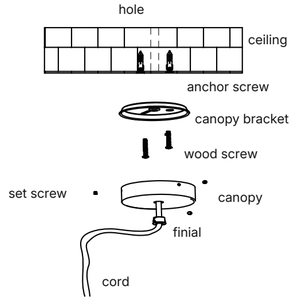

05 Find the right wiring below:

a. 1 circuit with dimming 6-core cable

RED - LIVE
BLUE - NEUTRAL
GREEN - EARTH
WHITE - DIM LIVE
BLACK - DIM NEUTRAL
CLEAR - SPARE

b. 3-core cable Grey, black or white

BROWN - LIVE
BLUE - NEUTRAL
GREEN - EARTH


c. 3-core clear cable

WHITE - LIVE
BLACK - NEUTRAL
GREEN - EARTH


06 Turn on power.

CONTINUOUS RUN ASSEMBLY

01 If joining multiple fixtures together, remove the covers and loosen the set screws on the connector brackets.

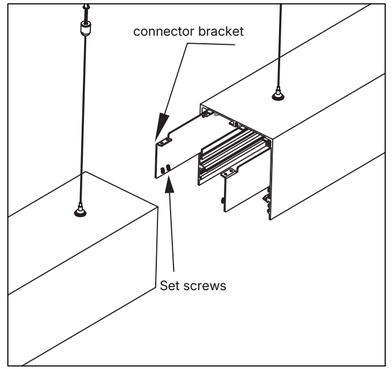



03 Join sections together and secure the joined fixtures with the JOINER BRACKET set screws.

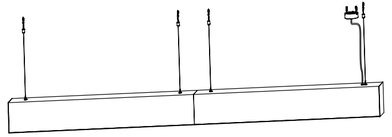

CONTINUOUS RUN ASSEMBLY

02 Connect wires between fixtures using the connectors provided and push excess wire into the fixtures.

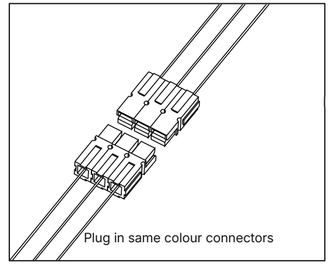

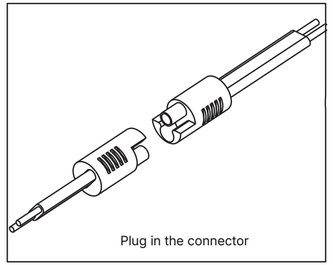

04 Install the covers.