


INSTALLATION AND ASSEMBLY INSTRUCTIONS



FLEX SERIES

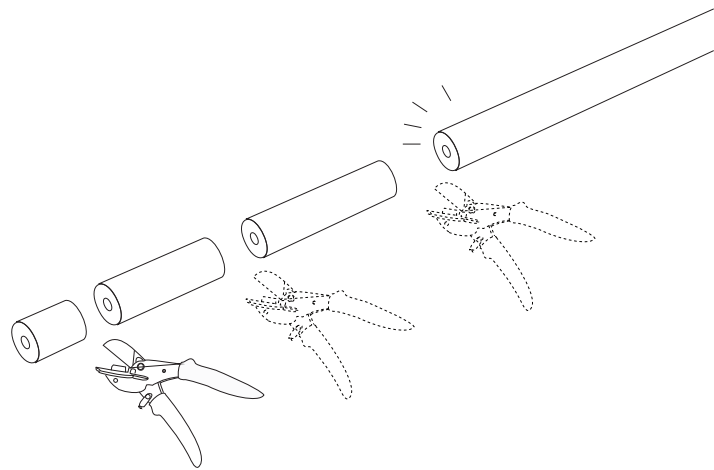

WARNING: Failure to follow instructions could result in damage to product and void warranties!
WARNING: Risk of fire or electrical shock. Disconnect power before installing or servicing.
WARNING: Verify the existing input voltage and ensure it matches input rating on luminaire's product label, located on inside of access cover.
WARNING: Before proceeding, read all instructions carefully to ensure proper and safe installation.
IMPORTANT: This product must be installed in accordance with the applicable installation code by a licensed electrician, familiar with the construction and operation of the product and the hazards involved.


If you have questions or concerns, please reach out to TechoLED at 212-876-5373 or info@techoled.com we are here to help!

1. SURFACE MOUNT

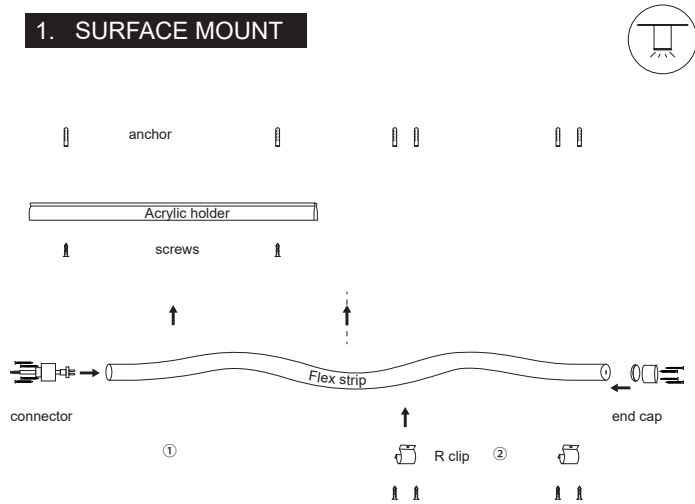


1. Punch anchor into ceiling.
2. ① Fix U bracket onto ceiling by self-tapping screw.
3. Install Solder-free connector and tail end cap onto neon light.
4. ② Install neon light into R clip, Fix R clip onto ceiling by self-tapping screw.
5. Install neon light into U bracket.


2. Pendant

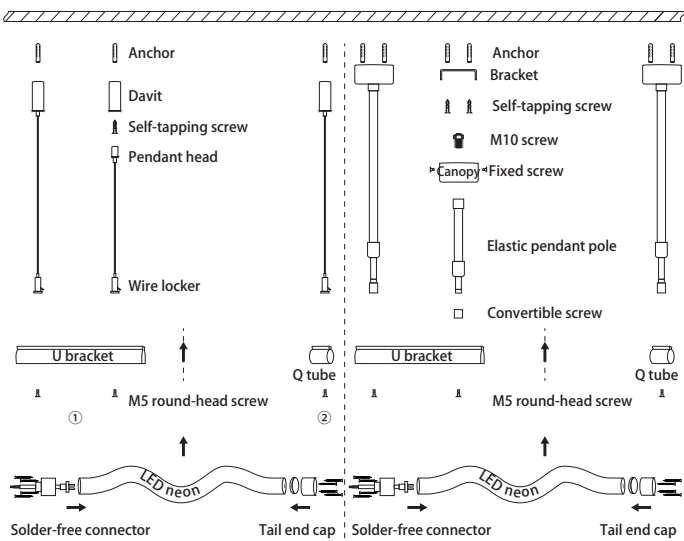

1. Punch anchor into ceiling.
2. Fix davit by self-tapping screw, install pendant head into davit.
3. ① Fix U bracket to wire locker by M5 round-head screw.
4. ② Fix Q tube to wire locker by M5 round-head screw.
4. Install solder-free connector and tail end cap onto neon light.
5. ① Install neon light into U bracket.
6. ② Install neon light into Q tube.

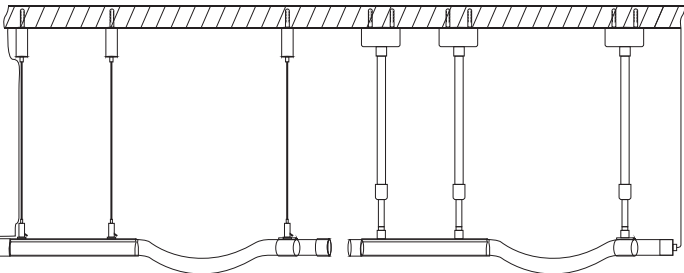


3. Horizontal pendant by pendant pole

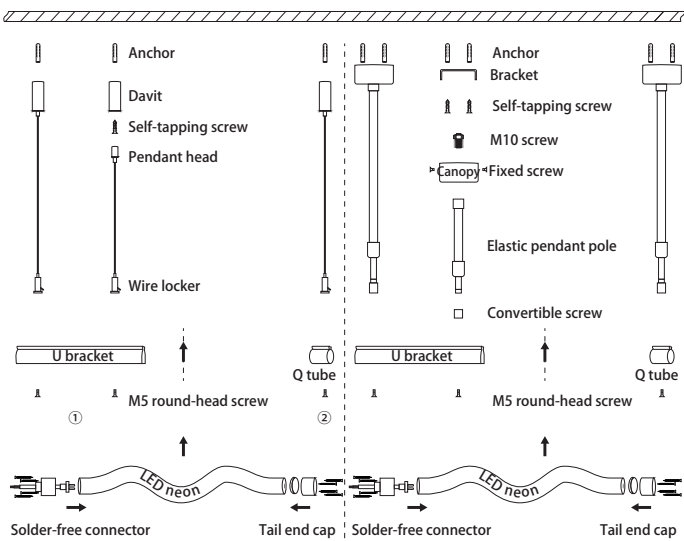


1. Punch anchor into ceiling.
2. Fix bracket onto ceiling by self-tapping screw.
3. Fix elastic pendant pole to canopy by M10 screw.
4. Fix canopy to bracket by screw.
5. Fix pendant pole clip / pendant bar to convertible screw by M5 screw and then connect to elastic pendant pole.
6. Install non-solder end cap and tail end cap onto neon light.
7. Install neon light into pendant clip.


4. U shape ceiling mounted

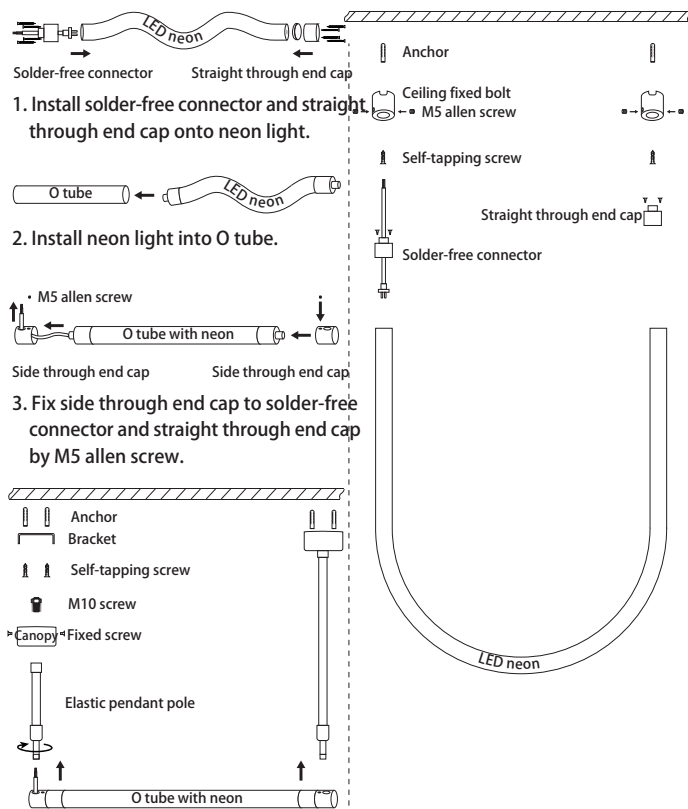


1. Punch anchor into ceiling.
2. Install solder-free connector and tail end cap onto neon light.
3. Fix ceiling fixed bolt onto ceiling, cables pass through ceiling fixed bolt.
4. Insert solder-free connector and tail end cap into ceiling fixed bolt.
5. Revolve elastic pole into T connector.
6. Fix bracket onto ceiling by self-tapping screw.
7. M10 screws pass through canopy to fix elastic pole.
8. Fix canopy to bracket by fixed screw.

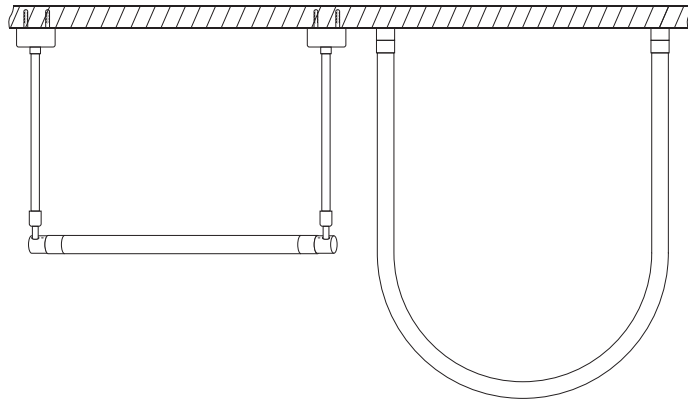


5. O shape pendant

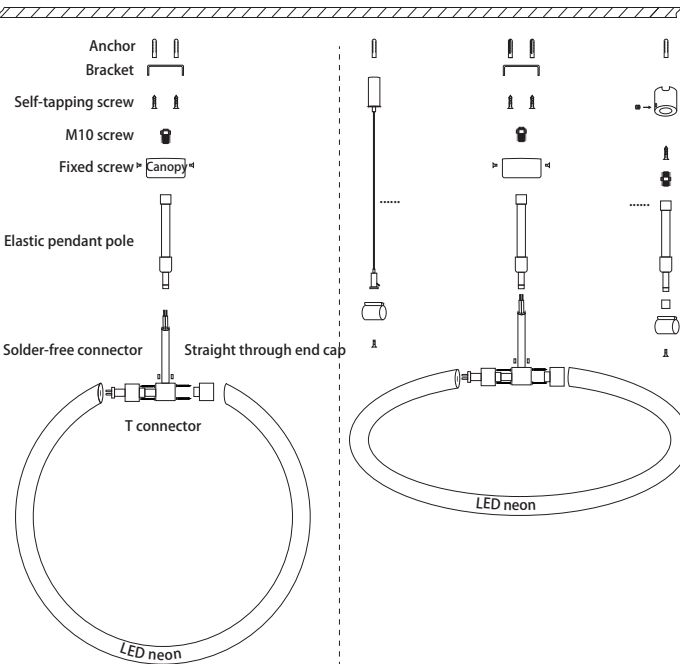

1. Intall O shape neon light (refer to topic 5 O shape pendant).
2. Install it as per diagram by several pendant wires and pendant poles (refer to topic 2 and topic 3).

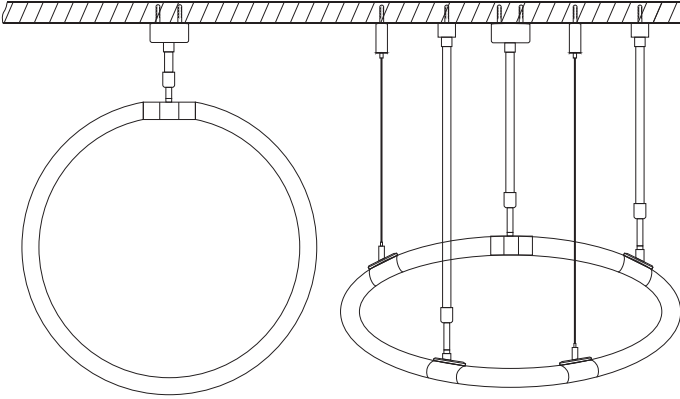


6. Vertical pendant by pendant pole

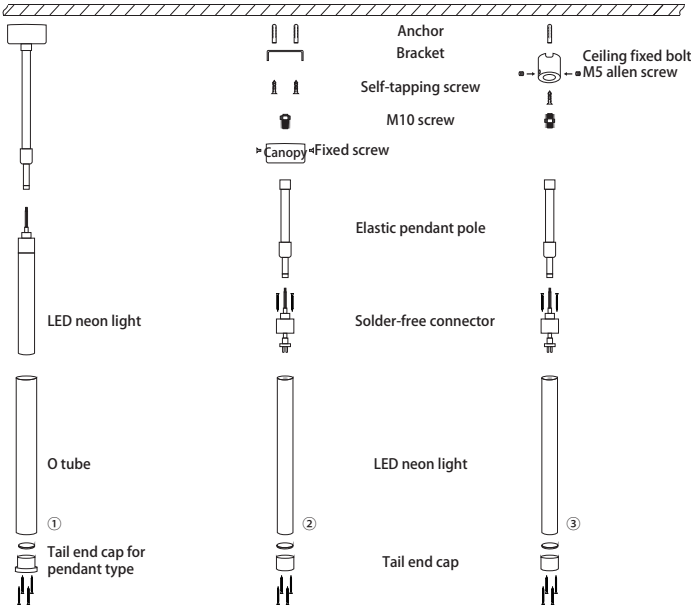


1. Punch anchor into ceiling.
2. Install solder-free connector and tail end cap onto neon light.
3. ① Install neon light into O tube.
4. ① ② Cables pass through elastic pole-canopy-M10 screw.
- ③ Cables pass through elastic pole-M10 screw-ceiling fixed bolt.
5. Revolve elastic pole into solder-free connector.
6. ① ② Fix bracket onto ceiling by self-tapping screw.
- ③ Fix ceiling fixed bolt onto ceiling by self-tapping screw.

7. Vertical ceiling mounted

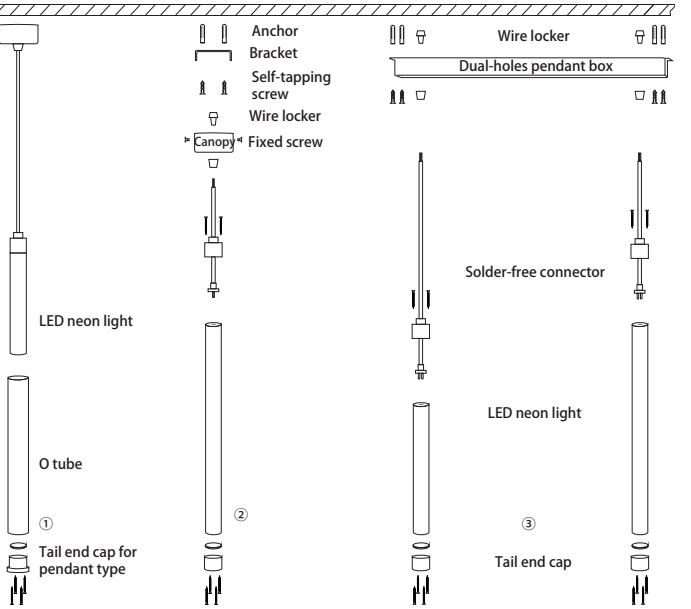


1. Punch anchor into ceiling.
2. Install solder-free connector and tail end cap onto neon light.
3. ① Install neon light into O tube.
4. ① ② Fix bracket onto ceiling by self-tapping screw, fix cables by wire locker, fix canopy to bracket by fixed screw.
- ③ Install led driver into dual-holes box, fix cables by wire locker, fix dual-holes box by self-tapping screw.

Ceiling fixed bolt

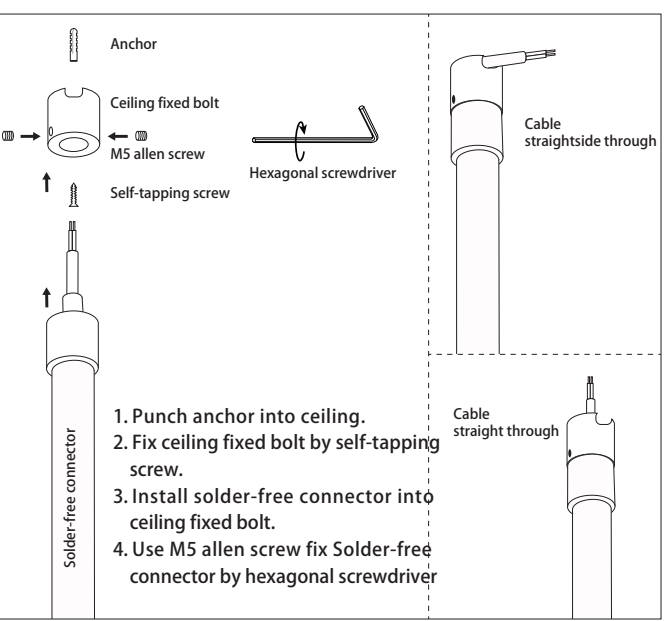


1. Punch anchor into ceiling.
2. Fix ceiling fixed bolt by self-tapping screw.
3. Install solder-free connector into ceiling fixed bolt.
4. Use M5 allen screw fix Solder-free connector by hexagonal screwdriver


Cable straight through end cap

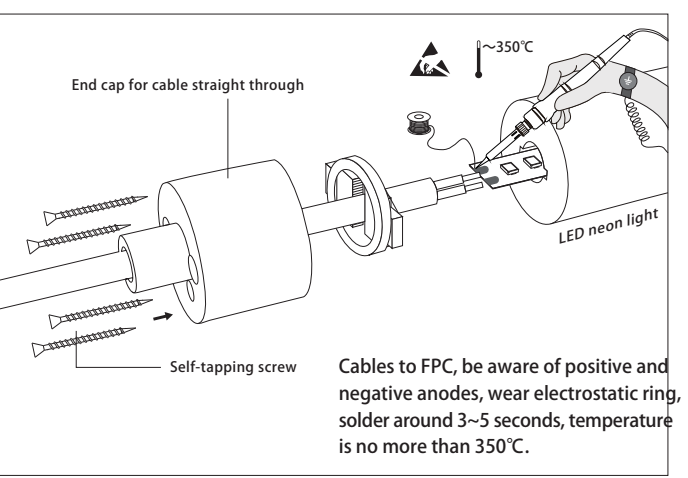

Profile for pendant

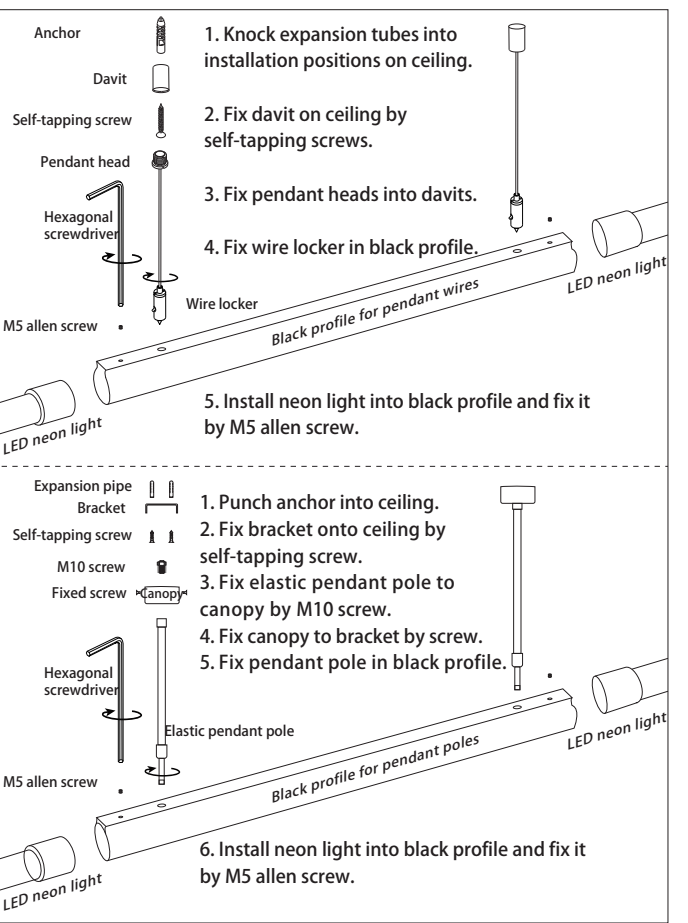


Solder-free connector

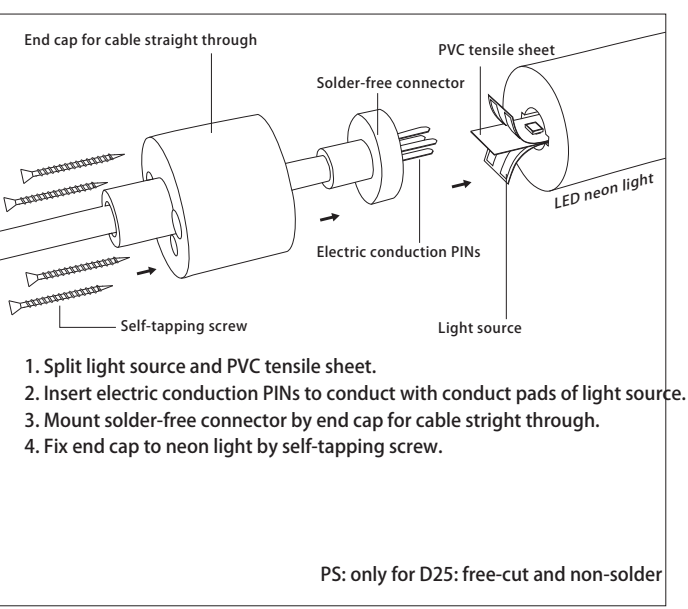


1. Split light source and PVC tensile sheet.
2. Insert electric conduction PINs to conduct with conduct pads of light source.
3. Mount solder-free connector by end cap for cable stright through.
4. Fix end cap to neon light by self-tapping screw.

PS: only for D25: free-cut and non-solder

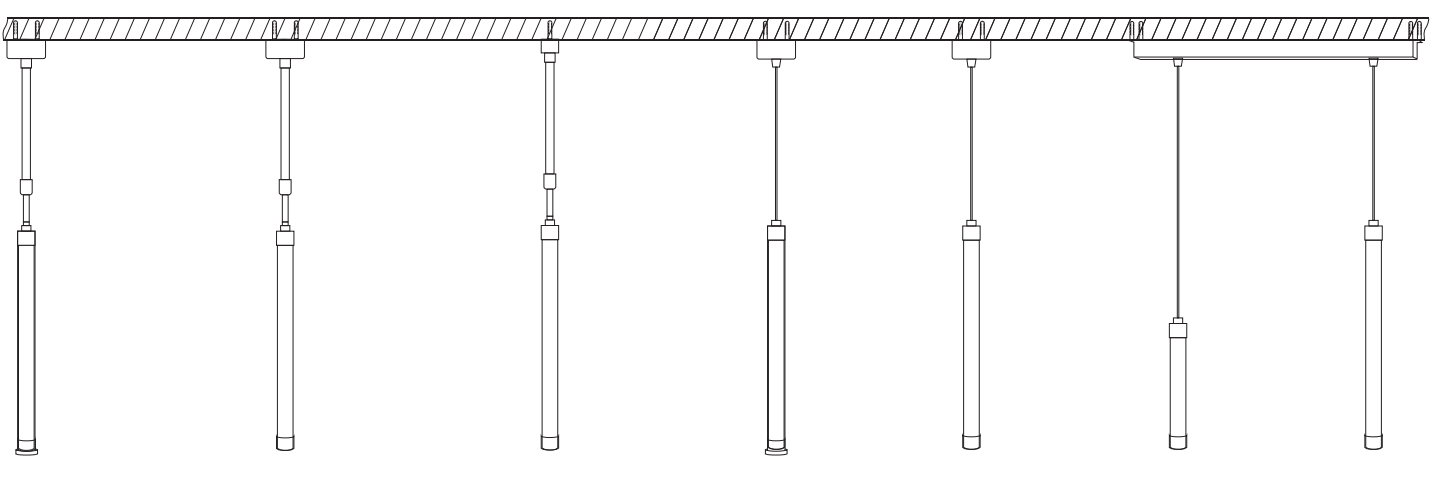

T connector

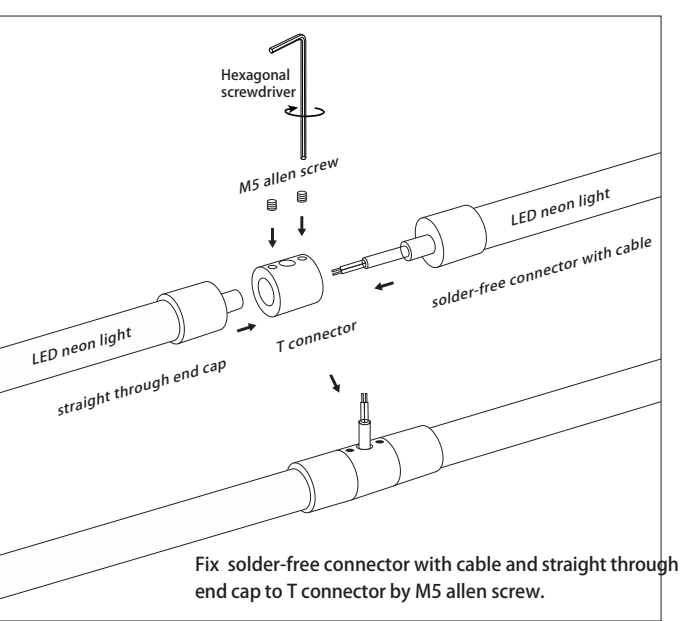

1. Punch anchor into ceiling.
2. Fix ceiling fixed bolt by self-tapping screw.
3. Install solder-free connector into ceiling fixed bolt.
4. Use M5 allen screw fix Solder-free connector by hexagonal screwdriver

